

FIXTURE ASSEMBLY SHEET

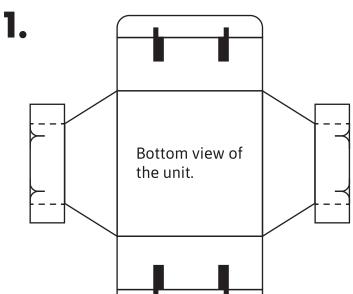


IMPORTANT


Attaching the card unit to the turntable. Make sure the triangular flaps on the card unit are stuck to the turntable.

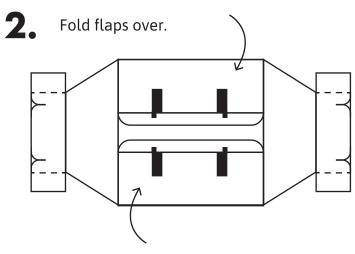


Fold tabs over into the centre.

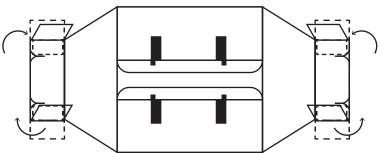

Fold side flaps over, inserting the folded tabs into the slots (the tabs then open up inside to provide a secure fix).

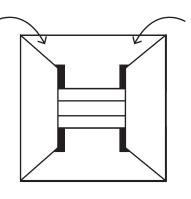

Hook Fitting

 

Hook side view. Simply slot the hook clip into the card slot and securely push down into place.

To watch a viedo on the assembly process go to www.wplgifts.co.uk/assembly

Alternatively scan the QR code below to link to the online clip.



(If using an iPhone simply hold over the code in camera mode and the link will open).